

PE1000D-13F and PE1000D-13UV

CERMAX® XENON SHORT-ARC LAMPS



Cermax® Xenon short-arc lamps from Excelitas Technologies are ideal for applications that require a high degree of illumination control.

The Cermax® Xenon short-arc lamp from Excelitas Technologies is an innovative lamp design in the specialty lighting industry. Cermax® Xenon lamps were first introduced in the early 1980s and are now used in diagnostic and surgical endoscopes in most major hospitals worldwide, in high-brightness projection display systems, and for a wide variety of high-performance applications.

Cermax® Xenon lamps, Models PE1000D-13F and PE1000D-13UV, have an integrated elliptical reflector, enabling high-intensity, focused output of ultraviolet, visible, and infrared radiation. With their internal reflector and rugged ceramic body construction, Cermax® Xenon lamps are the safest and most compact alternative to conventional quartz xenon lamps. This makes them ideal for applications that require a high degree of illumination control.

Current-regulated or power-regulated power supplies with output ripples of less than 5% are recommended. Single-shot ignition pulses are advised because radio frequency starters may damage the lamp's internal reflector.

In addition to lamps, Excelitas Technologies manufactures Cermax® Xenon short-arc lamp power supplies, lamp holders, OEM lighting systems, and fiber optic light sources.



Key Features

- High-intensity, focused illumination 23500 Lumens
- Up to 24 Watts of UV output (<390 nm)
- Power range of 600-1050 Watts
- 1000 hours life
- Broad spectral range with 5900°
 Kelvin color temperature

Applications

- Medical and industrial fiber optic illuminators
- Machine vision
- Infrared and visible spotlights/beacons
- Spectroscopy
- Microscopy
- UV Curing
- Video projection
- Solar simulation
- Wafer inspection



PE1000D-13F and PE1000D-13UV

CERMAX® XENON SHORT-ARC LAMPS

PE1000D-13F and PE1000D-13UV

Operational Specifications				
Description	Nominal	Range		
Power	1000 Watts	600-1050 Watts		
Current	50 amps (DC)	30-56 amps (DC)		
Operating Voltage	20 volts (DC)	15-24 volts (DC)		
Ignition Voltage	23-35 kilovolts (system dependent)			
Temperature	150° C (Maximum)			
Lifetime*	1000 hours typical			

^{*} End of life is defined as 50% of initial output

Initial Output at Nominal Power				
F= UV Filtered Output	UV= UV Enhanced Output	V Enhanced Output		
Description	PE1000D-13F	PE1000D-13UV		
Radiant Output*	245 Watts	245 Watts		
UV Output*	13 Watts	24 Watts		
IR Output*	135 Watts	132 Watts		
Visible Output*	23500 Lumens	21000 Lumens		
Color Temperature	5900° Kelvin	5050° Kelvin		
Peak Instabilities		4%		
Spot Size at Crossover at 50%	pts. 0.	0.2 inches (4 mm)		
Spot Size at Crossover at 10%	pts. 0.	0.4 inches (9 mm)		

^{*} These values indicate total output in all directions. Wavelengths = UV<390 nm, IR>770 nm, Visible: 390 nm-770 nm

Physical Specifications		
Description	Specification	
Focal Distance "A"	1.4 inches (35 mm)	
Weight	687 grams	
Window Diameter	1.375 inch (34.92 mm)	

www.excelitas.com PE1000D-10 11/2011 page 2 of 4

CERMAX® XENON SHORT-ARC LAMPS


Focused Output			
Description	Visible Output	Total Output*	
3 mm aperture	3500 Lumens	33 Watts	
6 mm aperture	12000 Lumens	110 Watts	
12 mm aperture	18000 Lumens	163 Watts	

^{*} Nominal values at 1000 Watts after 2 hour burn-in.

NOTES:

- 1. Lamp must not be operated with window facing upwards within 45° of vertical.
- 2. Seal temperature must not exceed 150° C.
- 3. Current/power regulated power supplies and Excelitas lamp housing units are recommended.
- **4.** Lamp must be operated within recommended current and power range. Over powering may lead to arc instability, hard starting and premature aging.
- **5.** Cermax[®] Xenon lamps are much safer lamps to use than their quartz xenon arc lamp equivalents. However, caution must be practiced when operating lamps because they are under high pressure, require high voltage, reach temperatures up to 200° C, and their IR and UV radiation can cause skin burns and eye damage. Please read the Hazard Sheet included with each lamp shipment.

Mechanical Dimensions

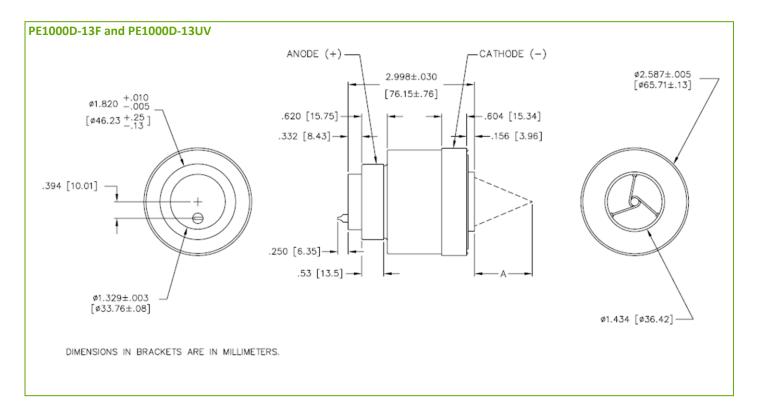


www.excelitas.com PE1000D-10 11/2011 page 3 of 4

PE1000D-13F and PE1000D-13UV

CERMAX® XENON SHORT-ARC LAMPS

Spectral Output

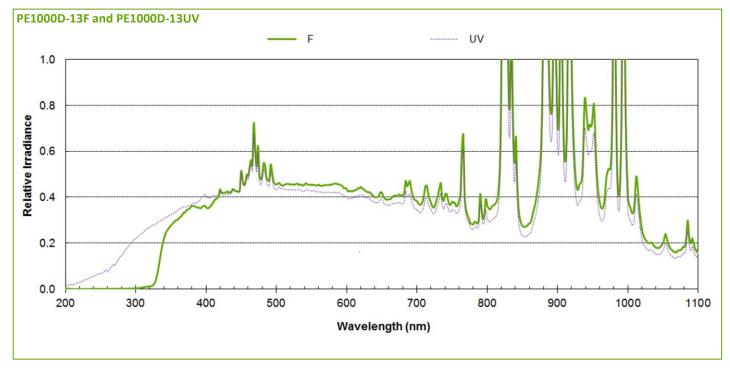

About Excelitas Technologies

Excelitas Technologies is a global technology leader focused on delivering innovative, customized solutions to meet the lighting, detection and other high-performance technology needs of OEM customers.

From medical lighting to analytical instrumentation, clinical diagnostics, industrial, and safety and security applications, and aerospace and defense applications, Excelitas Technologies is committed to enabling our customers' success in their specialty end-markets. Excelitas Technologies has approximately 3,000 employees in North America, Europe and Asia, serving customers across the world.

Excelitas Technologies Illumination, Inc. 44370 Christy Street Fremont, California 94538-3180 USA

Telephone: (+1) 510.979.6500 Toll-free: (+1) 800.775.6786 Fax: (+1) 510.687.1140 shortarcxenon.na.com Excelitas Technologies Singapore, Private Limited.

shortarcxenon.asia@excelitas.com

47 Ayer Rajah Crescent #06-12 Singapore 139947 Telephone: (+65) 6775 2022 (Main Line) Telephone: (+65) 6770 4366 (Customer Service Hotline) Fax: (+65) 6778 1752 Excelitas Technologies GmbH & Co. KG Wenzel-Jaksch-Str. 31 D-65199 Wiesbaden

Germany Telephone: (+49) 611 492 430 Fax: (+49) 611 492 165

shortarcxenon.europe@excelitas.com

Japan Excelitas Technologies

East Tower 4th Floor, Otemachi First Square 1-5-1 Otemachi, Chiyoda-ku, Tokyo 100-0004 Flephone: (+81) 3-5219-1228 Fax: (+81) 3-5219-1201 shortarcxenon.asia@excelitas.com

For a complete listing of our global offices, visit www.excelitas.com/locations

© 2012 Excelitas Technologies Corp. All rights reserved. The Excelitas logo and design are registered trademarks of Excelitas Technologies Corp. All other trademarks not owned by Excelitas Technologies or its subsidiaries that are depicted herein are the property of their respective owners. Excelitas reserves the right to change this document at any time without notice and disclaims liability for editorial, pictorial or typographical errors.

